

HOW TO READ YOUR METER



There is a small tab at the bottom of the meter that opens the meter cover protecting the face of the meter.

The cover opens to the right and a battery is mounted on the left.

Most meters have a small plastic antenna that points up, please do not remove the antenna.

If your meter does not wake up when the cover is open you may need to shine a flashlight on the meter face to wake it up. If your meter still doesn't wake up it may need to be replaced.



After an initial set of numbers, the first number displayed on the meter face is your total USAGE in cubic feet.

To convert cubic feet to gallons, multiply the reading by 7.48052.

An arrow above the total usage means the water is running.



The next number displayed is the RATE, the current amount of water being used, in cubic feet per minute.

If no water is being used you will see 0.000.

The meter will cycle between the USAGE and the RATE.



A solid faucet icon in the left hand corner of the meter screen means you have a continuous leak. A flashing icon means you have an intermittent leak.

To find a leak, turn off all water. The RATE will show what size leak you have. If you close your service valve and the leak stops you know the leak is downstream of the service valve. If the leak continues, the leak is at the meter. For tiny leaks you may need wait 8-10 cycles to finally see the leak displayed as 0.011.